



# ***Operator's Manual Supplement***

## ***Lift Tools™ Access Deck***

First Edition  
Second Printing  
Part No. 1292178GT

# Introduction

## Important

Read, understand and obey these safety rules and operating instructions before operating this machine. Only trained and authorized personnel shall be permitted to operate this machine. This manual should be considered a permanent part of your machine and should remain with the machine at all times. If you have any questions, contact us.

## Contact Us:

Internet: [www.genielift.com](http://www.genielift.com)

E-mail: [awp.techpub@terex.com](mailto:awp.techpub@terex.com)

## Approved Models

Model	Serial Number
S-40/45	from S4016H 22550
S-40/45 XC	from S40XCH-101
S-40/45 TRAX	from S4016H 22550
S-60/65	from S60H-36659
S-60/65XC	from S60XCH-45001
S-60 X	from S60H-36659
S-60 HC	from S60H-36659
S-60/65 TX	from S60H-36659
S-80/85	from S85H-13582
S-80 X	from S85H-13582
S-80/85 XC	from S80XCH-101
S-100	from S100D-1672
S-105	from S105D-1665
S-120	from S120D-1705
S-125	from S125D-1660
S-100 HD	from S100D-1672
S-120 HD	from S120D-1705

Model	Serial Number
SX105 XC	from SX105D-174
SX-135 XC	from SX135H-127
SX-125 XC	from SX125D-101
SX-150	from SX150H-201
SX-180	from SX180H-365
Z-60/34	from Z60H-746
Z-60/37	from Z60H-746
Z-62	from Z62H-3077
Z80	from Z80H-6076
Z-135	from ZX135H-2889
ZX-135	from ZX135H-2889

### **▲ WARNING**

Do not install the Access Deck system on any Genie product other than the designated models.

### **▲ WARNING**

The Access Deck can only be mounted on the mid rails of the platform. The Access Deck can never be mounted on the top rail.

### **▲ WARNING**

Do not operate the boom while using the Access Deck.

Copyright © 2018 by Terex Corporation  
First Edition: Second Printing, June 2019

Genie is registered trademarks of Terex South Dakota, Inc. in the U.S.A. and many other countries.

This accessory complies with  
ANSI/SAIA A92.20  
CAN/CSA B.354.6



## Introduction

### Genie Self-propelled Boom Products and Lift Tools Access Deck Guidance

Boom-supported Elevating Work Platforms are designed to carry personnel, along with their tools, and materials to an aerial work site. When platform access is limited and the personnel need to reach a work area that is beyond their working height, the Access Deck provides an elevated deck, above the main floor, to allow an occupant to extend their working height.

**This document provides guidance for the use of the Access Deck on Genie self-propelled boom products.**

### Definitions

#### Qualified person

A "qualified person" one who, by possession of a recognized degree, certificate, or professional standing, or by extensive knowledge, training and experience, has demonstrated his/her ability to solve or resolve problems related to the subject matter, the work, or the project.

### Genie Self-propelled Booms may be used to lift under the following guidelines:

- 1 The owner/employer/user/operator of the boom is responsible for providing fall protection for boom operator.
- 2 A "qualified person" with knowledge of fall protection regulations and systems must design the work space and the Access Deck system to ensure worker safety.
- 3 Genie Booms have been stability tested on level ground with the rated load in the platform. The combined weight on the Access Deck must not exceed 300 lbs/136 kg.  
  
Note: The weight of the Access Deck assembly (36 lbs/16 kg) must be subtracted from the platform capacity that it is mounted on.
- 4 Attachment and use of an Access Deck must be approved and authorized by the equipment owner.
- 5 It is the responsibility of the equipment owner and/or the contractor to perform a hazard analysis when using the Access Deck, and ensure that the equipment complies with the essential health and safety requirements applicable to the jobsite, as well as local, state, provincial, and federal rules and regulations, and standards related to the use of the equipment.

---

## Introduction

- 6 The boom must be on a firm level surface to use the Access Deck.
- 7 A person trained in the operation of the Genie boom shall remain on the ground near the machine base controls to prevent unauthorized use and to prevent the machine from being operated while using the Access Deck.

### Owner/Employer/User/Operator Requirements:

#### Owner/Employer/User/Operator Requirements:

- 1 Operators must be trained and qualified on safe operation of the equipment, and be familiar with the specific model of Genie equipment as follows:
  - Be familiar and comply with the equipment operating and safety manuals, decals and warnings.
  - Understand all control functions.
  - Be aware of and understand all safety devices specific to the equipment being used.
  - Be instructed how to avoid the hazards.
- 2 Comply with all applicable jobsite, local, state, provincial, and federal rules and regulations, and standards related to the use of the equipment.
- 3 The equipment must be in proper working condition and configuration.

In consideration for Genie's guidance herein, the equipment owner, employer, user and operator hereby agree to indemnify and hold harmless Terex USA and its parent and affiliated companies against any and all liabilities, claims, suits, losses, costs and legal fees caused by, arising out of, or resulting from any negligent act or omission in the operation of the equipment; the failure to comply with the criteria set forth in this manual related to the use of a boom with an Access Deck the safety rules and operating instructions in the Operator's Manual. **By proceeding with the use of a boom with an Access Deck, you agree to adhere to the requirements set forth herein, including said indemnification. If you do not agree, do not proceed with the proposed use.**

## Introduction



### Danger


Failure to obey the instructions and safety rules in this manual will result in death or serious injury.

### Note

The Lift Tools™ Access Deck complies with the requirements of ANSI/CSA markets. All other markets are prohibited from use.

The Access Deck can only be used on Genie Boom-Supported Elevating Work Platforms equipped with the following 8 ft/2.4 m platforms:


- ▲ Side entry swing gate platforms

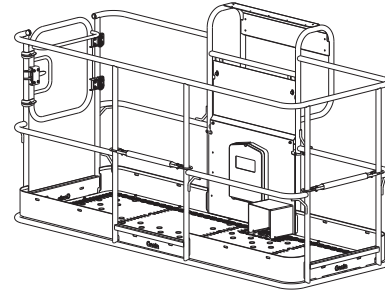

- ▲ TRI entry platforms

Note: 8ft TRI entry platforms only.

6ft platforms prohibited.

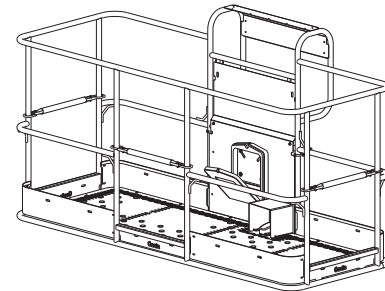

Use on all other machines is prohibited.

## Introduction

**⚠ DANGER** Using the Access Deck with the options below will result in death or serious injury.


The Access Deck cannot be used with machines equipped with the following:

- ▲ Panel cradle (option)
- ▲ Center mounted swing gate (option)
- ▲ Traveling Fall Arrest Anchor System
- ▲ Half mesh (option)
- ▲ Full mesh (option)
- ▲ Assembly latch guard (swing gate side)
- ▲ Any Aircraft Protection (option)

**⚠ DANGER** Using the Access Deck with the options below will result in death or serious injury.

The Access Deck cannot be used with machines equipped with the following:

- ▲ Front entry platforms

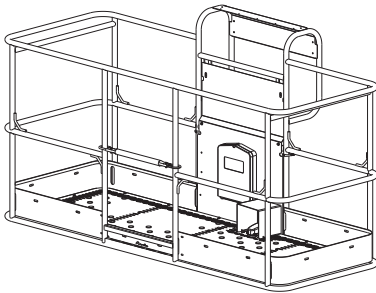

## ▲ Lift Tools™ Access Deck Safety

Read, understand and obey all warnings and instructions provided with the Access Deck.

Do not exceed the rated platform capacity. The Access Deck and handle assembly weighs 36 lbs/16 kg. The weight of the Access Deck assembly will reduce the rated platform capacity and must be subtracted from the total platform load.

The Access Deck assembly and handle must be mounted for use together.

Be sure the Access Deck is securely installed. Only use the folding handle for stability.

When the Access Deck structure is attached, this manual should be with the machine at all times.

The Access Deck can be transported on the mid-rail when all locking mechanisms are engaged and securely fastened to the platform. The platform is required to be parallel to the ground at all times during transportation.

**⚠ CAUTION** Do not use Access Deck with ice, grease or debris on the mid-rail surfaces.

**⚠ DANGER** Do not operate the boom once the operator has tied off and standing on the Access Deck.

# Introduction


## Symbol and Hazard Pictorials Definitions




The Access Deck weighs 36 lbs/16 kg



Read the supplement, part number 1292178.

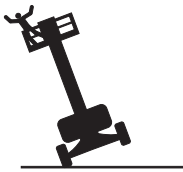

Tip-over hazard

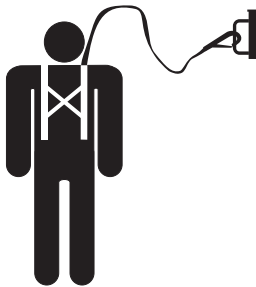

Maximum capacity 300 lbs/136 kg.

## Pre-operation Inspection

- Be sure that the operator's manual, safety manual, responsibilities manual and any necessary supplements are complete, legible and in the storage container located in the platform.
- Be sure that all decals are legible and in place.

Check the Access Deck for damage or wear, improperly installed, loose or missing parts and unauthorized modifications.

- Nuts, bolts and other fasteners
- Cracks in welds or structural components
- Dents or damage to Access Deck
- Check platform mounting location. The mounting location must be undamaged and clear of debris, ice, oily and slippery surfaces.

## Decal Inspection

Use the inspection to verify that all decals are legible and in place. Decals may vary depending on machine configuration.


Part No.	Decal Description	Qty
1281174	Decal, Lanyard , fall arrest/fall restrainery	8
1292288	Decal, Maximum Capacity, Word, Access Deck	1
1292288FR	Decal, Maximum Capacity, Word, Access Deck	1
1292289	Decal, Maximum Capacity, Symbol, Access Deck	1

# Operating Instructions

## Lift Tools™ Access Deck Operation

- 1 Verify the Access Deck installation instructions have been followed properly and that the Access Deck and handle are secured with locking pins to the platform railings.

**⚠ WARNING** Tip-over hazard The weight of the Access Deck will reduce the rated platform capacity of the machine and must be factored into the platform load.

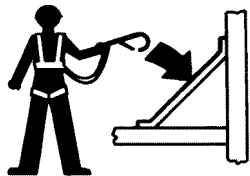

Occupants must wear a safety belt or harness in accordance with governmental regulations. Attach the lanyard to the anchor provided in the platform. Lanyard to be 6' retractable.



Do not sit, stand, or climb on the platform guard rails and Access Deck toeboard. Maintain a firm footing on the platform or Access Deck floor at all times.

- 2 Pull the lock pin on the right side of the step to lower and swing Access Deck step down.
- 3 Rotate the handle up to the vertical position. Secure the handle with the 3/8" lock pin on the handle assembly.

## Annual Inspection

Inspect for missing or loose components.

Check all fasteners are properly tightened.

Inspect all components for damage or wear. Check for cracks, bends and corrosion.

Inspect all welds for cracks.

Verify the Access Deck rotates freely about the right slot on the mid-rail.

Verify the locking cam engages the mid-rail with audible click and locks fully with the pop pin on the deck.

Verify the pop pin on the step engages in both the open and closed position with audible click.

Verify the handle can freely rotate around the shoulder bolt.

Verify the detent pin and lock the handle both up and down.

## Inspection After a Fall

Note: In the event of an operator fall, the Access Deck and the Genie boom must be immediately removed from service and inspected by a "qualified person". If the Access Deck and the Genie boom pass the inspections listed below, the Access Deck and the Genie boom may be returned to service.

Inspect all structural components of the Access Deck and the Genie boom. Replace any bent or damaged components. Replace any components with cracked welds. Replace all mounting fasteners for the Access Deck.

Perform an Annual Inspection on the Access Deck

Perform a Pre-Operation Inspection on both the Access Deck and the Genie boom.



## Installation Instructions



### Observe and Obey:

- This procedure shall be completed by a person authorized to install the Access Deck.
- Immediately tag and remove from service a damaged or malfunctioning machine.
- Repair any machine damage or malfunction before operating the machine.

### Before Starting Installation

- Read, understand and obey the safety rules and operating instructions in the appropriate Genie Operator's Manual and Supplements.
- Be sure that all necessary tools and parts are available and ready for use.
- Read this procedure completely and adhere to the instructions.

**Note:** Refer to the illustration page for installation instructions.

### Contents of Kit 1291798GT (8 ft/2.4 m Platform)

Description	Genie part number	Qty.
(1) Manual, Supplement	1292178GT	1
(2) Decal, Maximum Capacity, Word	1292288GT	2
(3) Decal, Maximum Capacity, Symbol	1292289GT	2
(4) Decal, Cosmetic, Lift Tool Access Deck	1292296GT	1
(5) Assembly, Deck	-	1
(6) Assembly, Handle	-	1
(7) U-bolt, 1.5 x 3/8	-	2
(8) Nylock flange nut, 3/8-16	-	4
(9) Bumper, Rubber, 5/16-18	-	1
(10) Nut, 5/16-18	-	1
(11) Nylock flange nut, 5/16-18	-	1

---

# Installation Instructions

## Deck Installation

Note: The deck assembly can only be installed on the mid-rails of the platform.

- 1 Slide the right side of the deck assembly so it is fully seated against the mid-rail of the platform (see illustration on the following page).
- 2 Pull the locking pin on the left side of the deck assembly to release the locking cam.
- 3 Lower the deck assembly onto the left side mid-rail until it is fully seated into the locking cam.

Note: The locking pin will make an audible click when fully seated.

- 4 Position and secure the deck assembly to the vertical rail with the clevis and detent lock pin.
- 5 Pull the locking pin and rotate the step down all the way.


Note: The locking pin will make an audible click when fully seated.

## Handle Installation

Note: Handle assembly must be mounted and accessible near the Access Deck anytime the Access Deck is mounted.

- 1 Mount the handle assembly to the platform railing using both the U-bolts and 3/8-16 nylock flange nuts. Do not over tighten.
- 2 Install the 5/16-18 nut onto the rubber bumper. Install the bumper assembly into the handle forming and secure with the 5/16-18 nylock flange nut. Do not tighten at this time.
- 3 Rotate the handle up to the vertical position. Secure the handle with the 3/8" lock pin on the handle assembly.
- 4 Adjust the inside nut on the rubber bumper until the bumper sits firmly against the handle. Tighten the 5/16-18 nylock nut.
- 5 Insert the supplement Operator's Manual into the manual storage box located in the platform.

# Installation Instructions

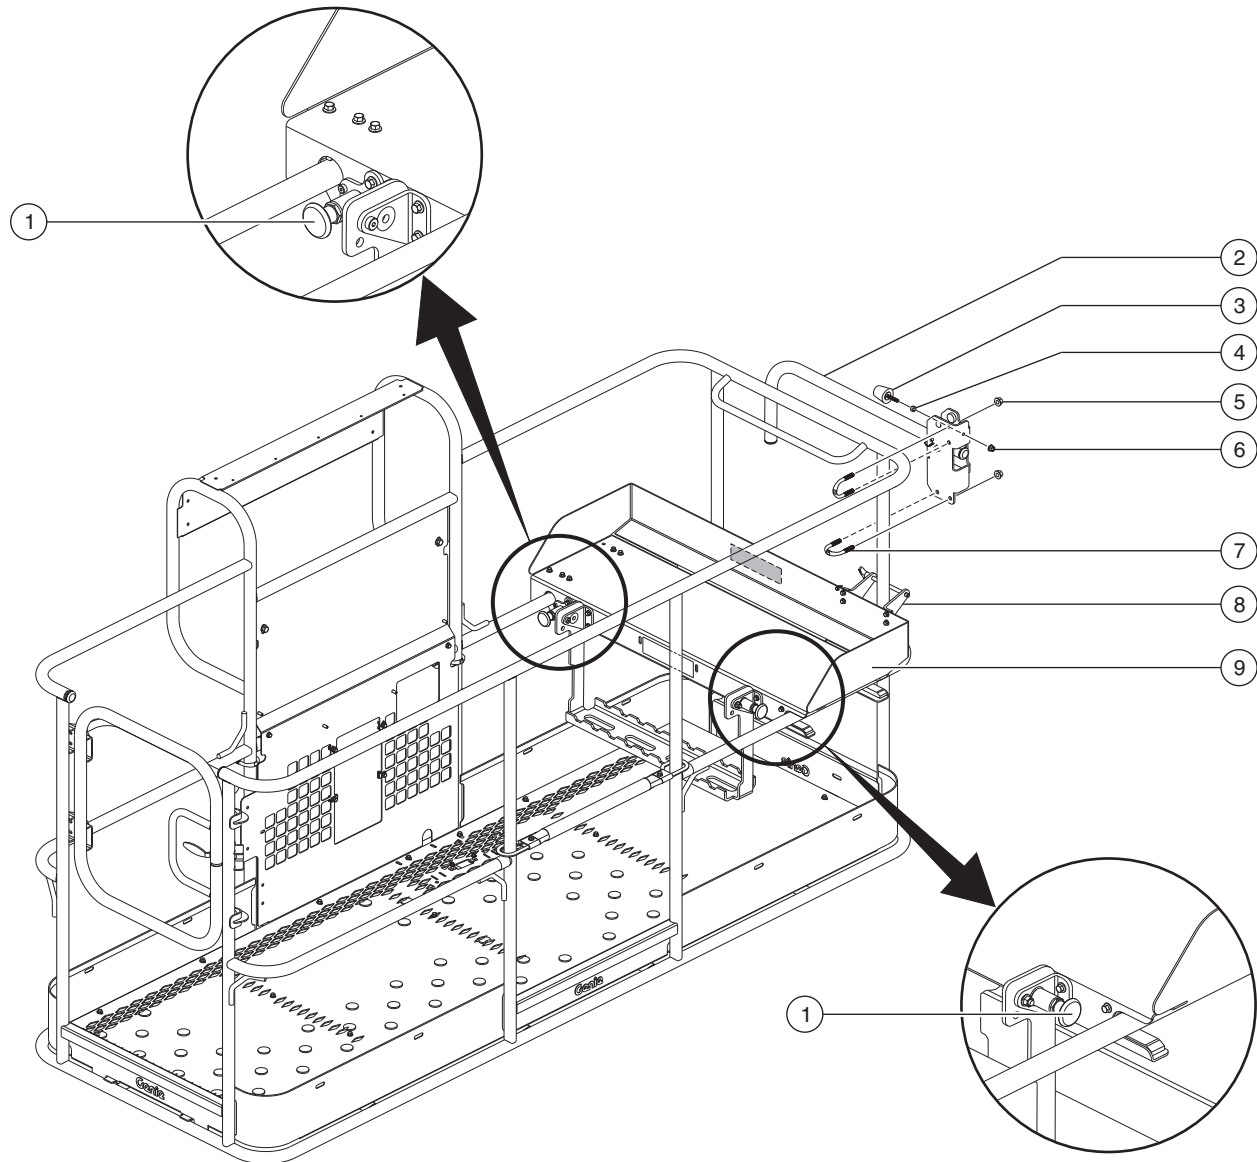

1	Lock pin
2	Assembly, handle
3	Bumper
4	Nut, 5/16-18
5	Nylock flange nut, 3/8-16

5	Nylock flange nut, 5/16-18
6	U-bolt,
7	U-bolt, 3/8016
8	Vertical rail lock pin
9	Assembly, deck



California Proposition 65



Operating, servicing and maintaining this equipment can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. These chemicals can be emitted from or contained in other various parts and systems, fluids and some component wear by-products. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your equipment and vehicle in a well-ventilated area and wear gloves or wash your hands frequently when servicing your equipment or vehicle and after operation. For more information go to [www.P65Warnings.ca.gov/passenger-vehicle](http://www.P65Warnings.ca.gov/passenger-vehicle).

Breathing diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

- Always start and operate the engine in a well-ventilated area.
- If in an enclosed area, vent the exhaust to the outside.
- Do not modify or tamper with the exhaust system.
- Do not idle the engine except as necessary.

For more information go to [www.P65warnings.ca.gov/diesel](http://www.P65warnings.ca.gov/diesel).